

.TYPNYCKEL

MANUAL	TYP	SCHEMA	CHASSITYP
R2C-1	11091621	66 89162-01	Klockradio
R2C-2	1109172/1/2/5		"
R2C-3	11091761 11091762		" "
R2D-1	3021-1 3021-2	66 83021-01 "	1133021-11 "
R2D-2	3022-1 3022-2	66 83022-01 "	1133022-00 "
R2D-3	3031-1 3031-2	66 83031-01 "	1133031-01 "
R2D-4	3131	66 83131-01	
R2D-5	3041 3141		
R2D-7	11091611 11091612		
R2D-8	11091731 11091732		
R2D-9	11091711 11091712		
R2D-10	11091751 11091752		
R2E-1	(L) 3822-1 (S) 3822-2		
R2E-3	(L) 3823-1 (L) 3431-1 (S) 3823-2 (S) 3431-2	66 83823-01 " " "	1533823-01 " " "
R2E-4	(L) 3831 (S) 3939	66 83831-01	1533831
R2E-6	(L) 3834 (S) 3934	66 83831-01 "	
R2E-8	(L) 3835 (S) 3935	66 83845-01 "	

MANUAL	TYP	SCHEMA	CHASSITYP
R2E-11	(L) 15025411 (L) 15025421 (S) 15025412 (S) 15025422	66 82541-01 " " "	1532541 " " "
R2E-13	(L) 15017531 (S) 15017532	66 81753-01 "	57 41000-02 "
R2E-14	(L) 15010531 (S) 15010532	66 81053-01 "	
R2E-15	(L) 15040511 (L) 15040521 (S) 15040512 (S) 15040522		
R2E-16	(L) 15030611 (L) 15030621 (L) 15030631 (S) 15030612 (S) 15030622 (S) 15030632	66 82541-01 " " " " "	
R2E-17	(L) 15020611 (L) 15020641 (L) 15020631 (L) 15020651 (S) 15020612 (S) 15020642 (S) 15020632 (S) 15020652		
R2E-18,1	Kassettdäck		57 41010-01/02 57 41011-01
R2E-19	(L) 15020741 (L) 15020751 (S) 15020742 (S) 15020752	66 80297-01 " " "	
R2E-20	(L) 15030791 (S) 15030792	66 83079-01 "	
R2F-1	6021		Högtalare
R2F-2	6821		"
R2F-3	6521		"
R2F-4	6831		"
R2F-5	6531		"
R2F-6	14015411		"
R2F-7	14040411		"

MANUAL	TYP	SCHEMA	CHASSITYP
R2F-8	14060311		Högtalare
R2F-9	14030411		"
R2F-10	14010411		"
R2F-11	14040421		"
R2F-12	14020411		"
R2F-14	14040611		"
R2F-15	14035611		"
R2F-16	14030711		"
R2G-1	55 89645-01 1903621-01	6689645-01 "	Stereodekoder
R2G-2	7631		Ambiofonibox