

LUXOR

KOPPLINGSSCHEMA
CIRCUIT DIAGRAM
SCHALTSCHHEMA
KYTKINKAAVA


SKANTIC

11091871

Ser. 1
Sarja 1

11091872

Nov. 1978

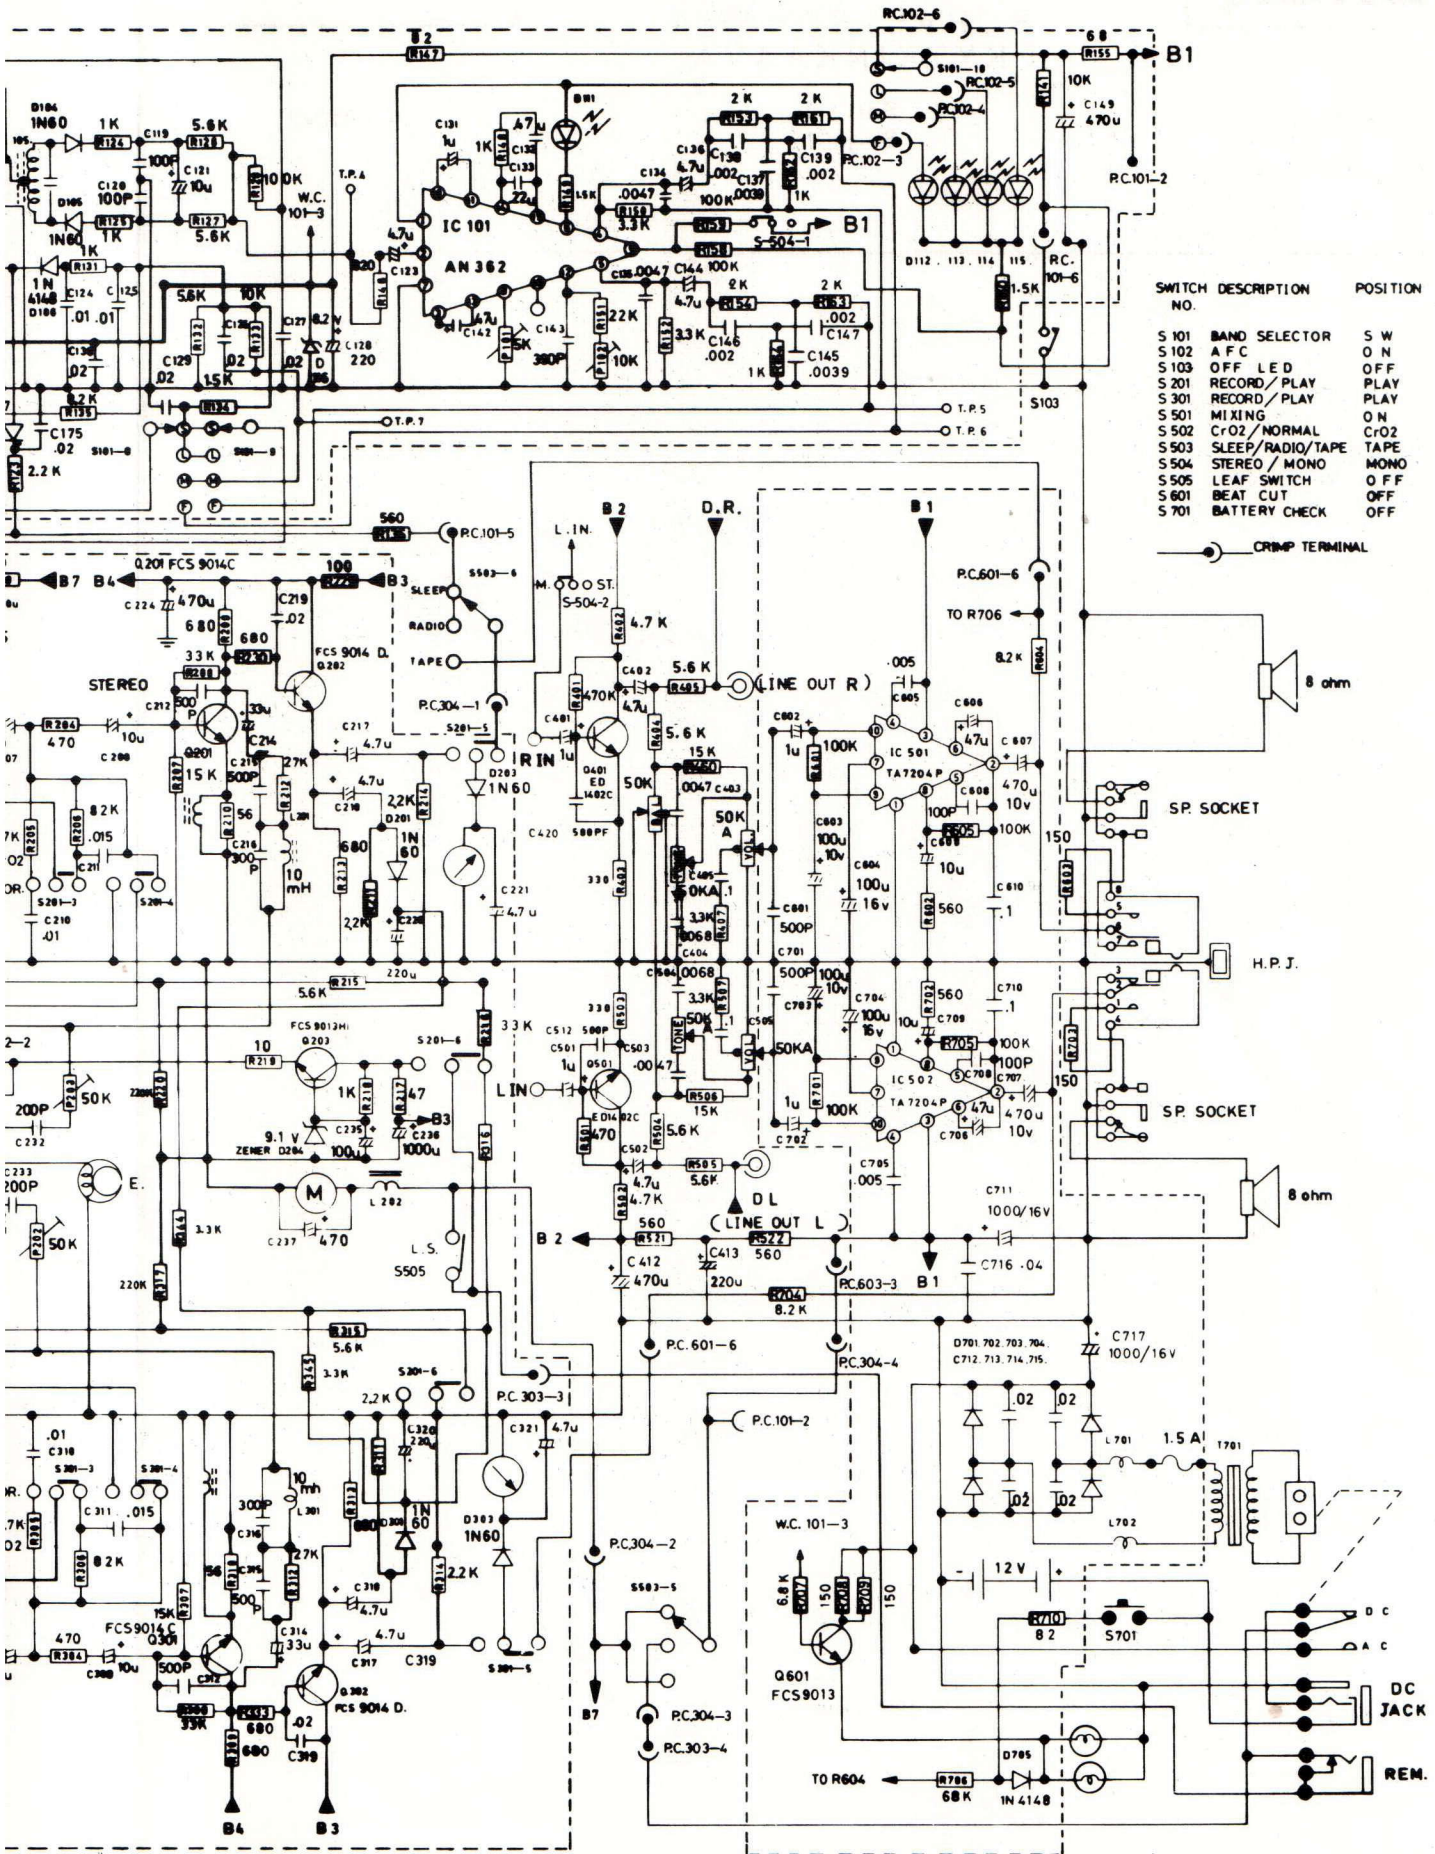

SWITCH NO.	DESCRIPTION	POSITION
S 101	BAND SELECTOR	S W
S 102	A F C	O N
S 103	OFF LED	OFF
S 201	RECORD/PLAY	PLAY
S 301	RECORD/PLAY	PLAY
S 501	MIXING	O N
S 502	CR 02 / NORMAL	CR 02
S 503	SLEEP/RADIO/TAPE	TAPE
S 504	STEREO / MONO	MONO
S 505	LEAF SWITCH	O F F
S 601	BEAT CUT	OFF
S 701	BATTERY CHECK	OFF

CRIMP TERMINAL

TO R706

8 ohm

SP. SOCKET

H.P.J.

SP. SOCKET

8 ohm

C 710

C 711

C 716

C 717

C 718

C 719

C 720

C 721

C 722

C 723

C 724

C 725

C 726

C 727

C 728

C 729

C 730

C 731

C 732

C 733

C 734

C 735

C 736

C 737

C 738

C 739

C 740

C 741

