

SERVICE MANUAL

SKANTIC

LUXOR

8009



 
TYPE 110 **9106**



— AC 220 V



— 700 mW/8 Ω



— 24 Hrs

— Battery back up 2 $\times$ 9 V

Frekvensområde
Frequency Range

FM
88 — 108 MHz

AM
515 — 1640 kHz

Mellanfrekvens
Intermediate Frequency

10,7 MHz


460 kHz

Max. känslighet
Max. Sensitivity




5 μ V


350 μ V/m

KOPPLINGSSCHEMA CIRCUIT DIAGRAM

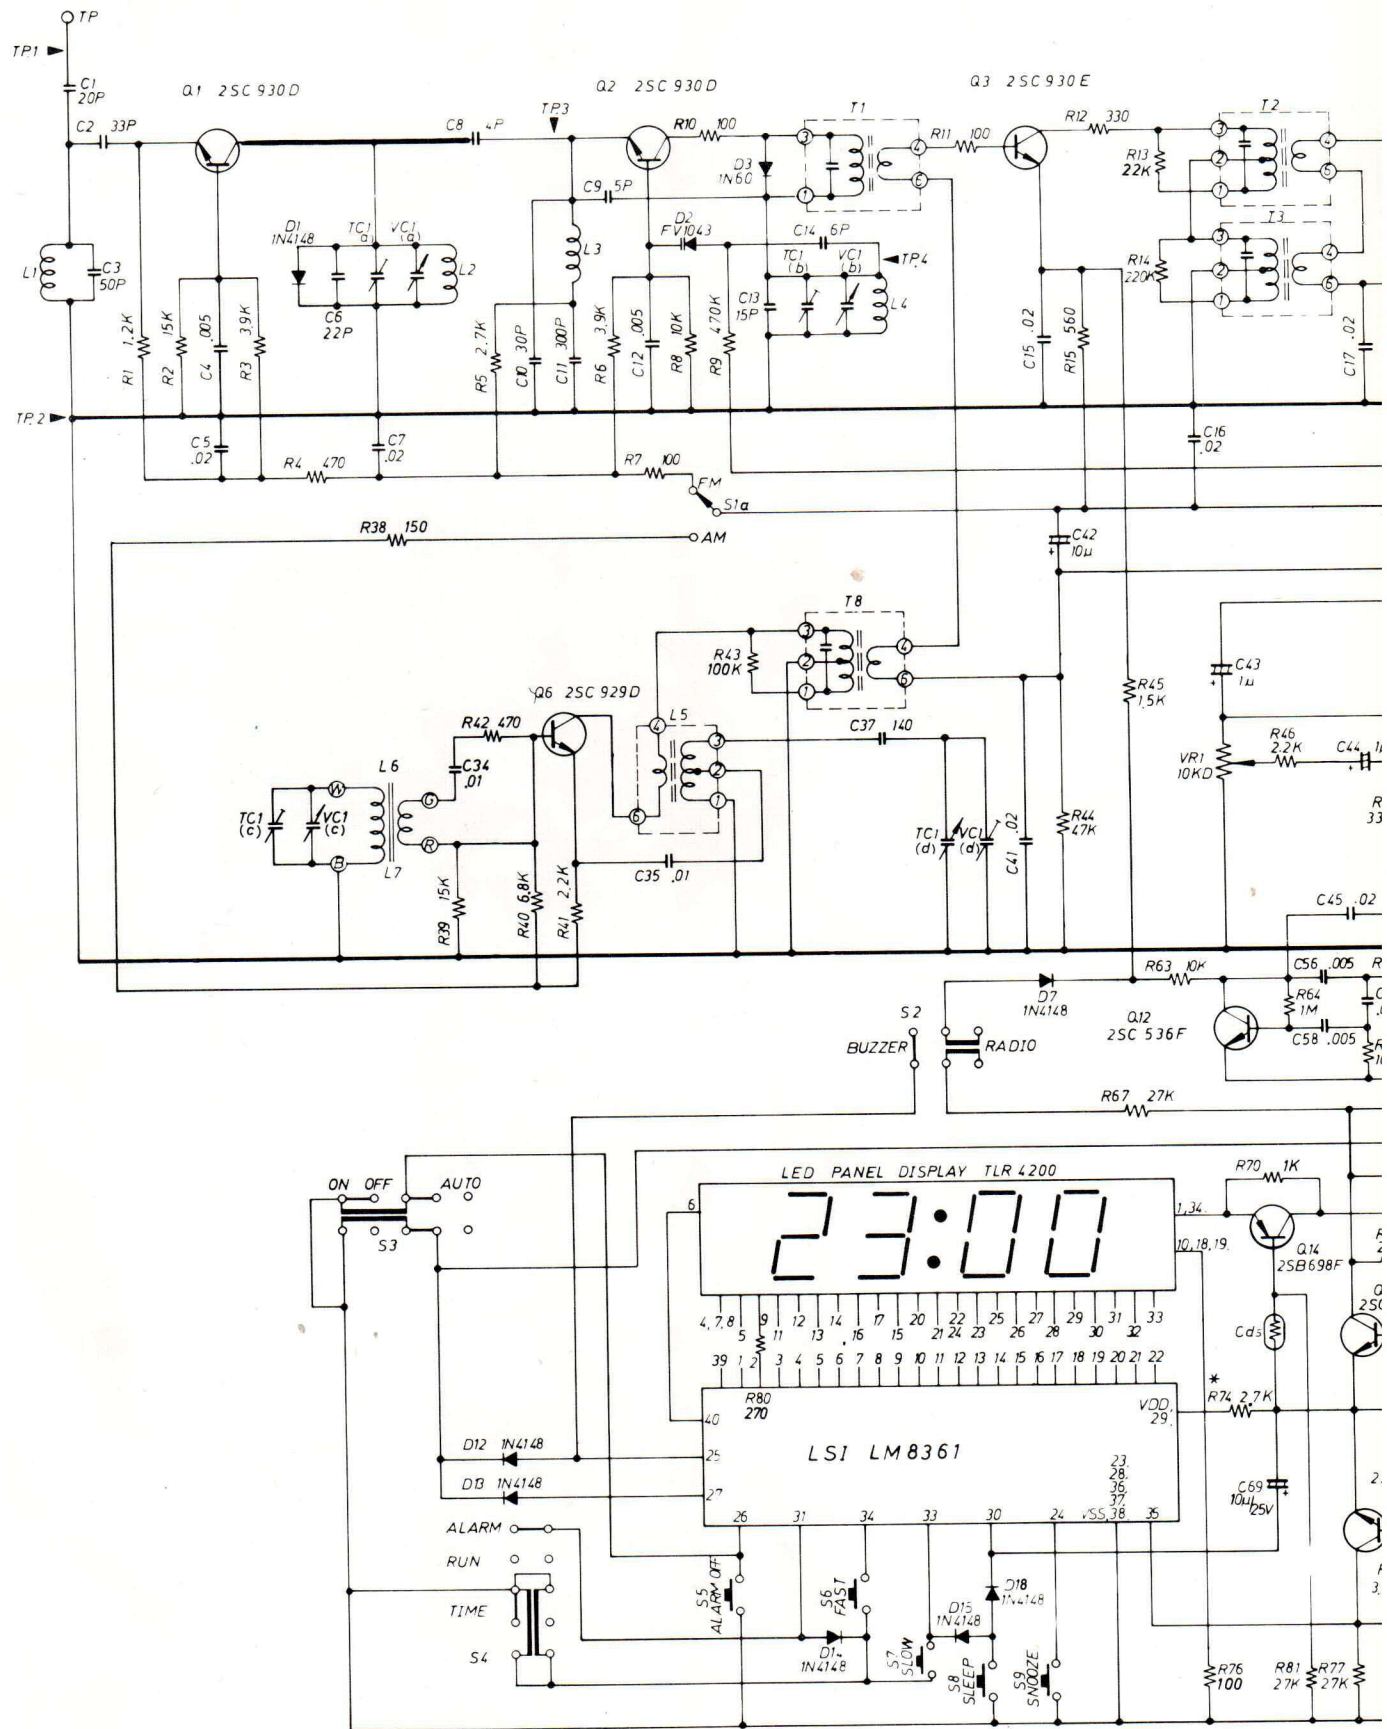

CONNECTION BOTTOM VIEW

 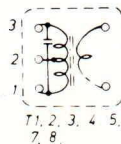 


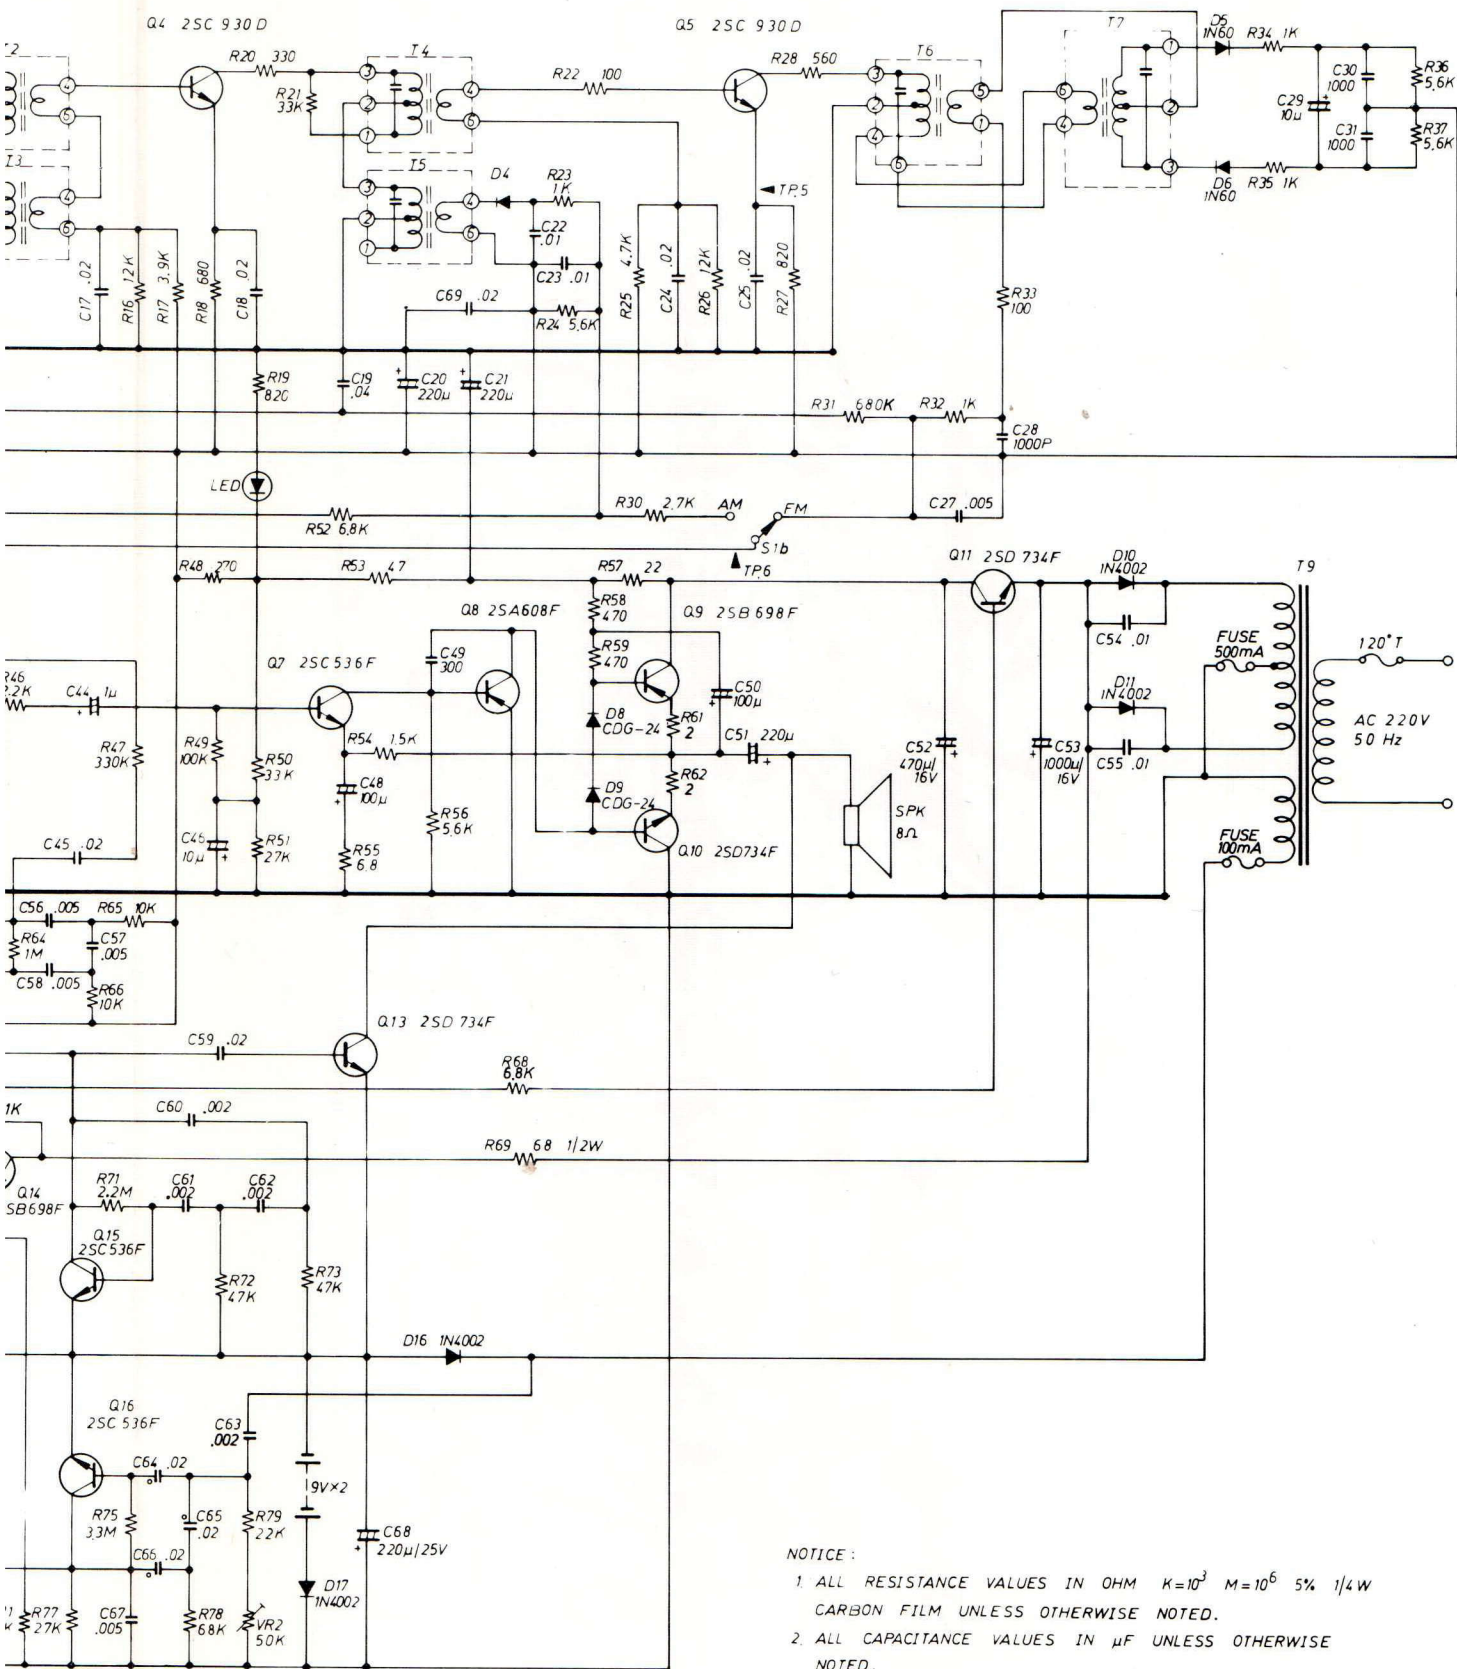

NOTICE :

1. ALL RESISTANCE VALUES IN OHM $K=10^3$ $M=10^6$ 5% 1/4 W CARBON FILM UNLESS OTHERWISE NOTED.
2. ALL CAPACITANCE VALUES IN μF UNLESS OTHERWISE NOTED.
3. C64, C65, C66 MYLAR CAP.
4. C6, C13 SELECTED VALUE DURING PRODUCTION.

 TOP VIEW



LSI